

VESTEL
MOBILITY



ELECTRIC VEHICLE CHARGER

EVC04 Series

User Manual



CONTENTS

1 - SAFETY INFORMATION	3
1.1 - SAFETY WARNINGS.....	3
1.2- GROUNDING WARNINGS	4
1.3 - WARNINGS ABOUT POWER CABLES, SOCKETS AND CHARGING CABLES.....	5
1.4 - WARNING FOR WALL INSTALLATION.....	5
2 - GENERAL INFORMATION.....	6
2.1 - INTRODUCTION TO THE PRODUCT COMPONENTS	6
2.2 - CONNECT CHARGING CABLE.....	7
2.2.1 - MODEL WITH SOCKET.....	7
2.2.2 - MODEL WITH TETHERED CABLE	7
2.3 - LED STATUS INDICATOR INFORMATION.....	8
3 - DESCRIPTION.....	10
4 - TECHNICAL SPECIFICATION (SOCKET AND TETHERED MODELS)	11
5 - CHARGING.....	13
5.1 - STANDALONE USAGE MODES	13
5.1.1 - AUTOSTART CHARGING MODE.....	13
5.1.1.1 - SOCKET EQUIPPED MODEL	14
5.1.1.1.1 - VEHICLE CONNECTION & CHARGING	14
5.1.1.1.2 - STOP CHARGING.....	14
5.1.1.2 - ATTACHED CABLE MODEL	15
5.1.1.2.1 - VEHICLE CONNECTION & CHARGING	15
5.1.1.2.2 - STOP CHARGING	15
5.1.2 - RFID AUTHORIZED MODE	16
5.1.2.1 - REGISTERING USER RFID CARD	16
5.1.2.1.1 - ADD/DELETE RFID CARD TO/FROM LOCAL RFID LIST.....	16
5.1.2.2 - SOCKET EQUIPPED MODEL.....	16
5.1.2.2.1 - VEHICLE CONNECTION & CHARGING	16
5.1.2.3 - ATTACHED CABLE MODEL	18
5.1.2.3.1 - VEHICLE CONNECTION & CHARGING	18
5.1.2.3.2 - STOP CHARGING	19
5.1.3 - SMART APPLICATION AUTHORIZED MODE (OPTIONAL WITH WI-FI).....	20
5.1.3.1 - CONFIGURING DRIVE GREEN APPLICATION	20
5.1.3.2 - DRIVE GREEN CONFIGURATION	20
5.1.3.3 - VEHICLE CONNECTION & CHARGING	20
5.1.3.3.1 - SOCKET EQUIPPED MODEL	21
5.1.3.3.1.1 - VEHICLE CONNECTION & CHARGING	21
5.1.3.3.1.2 - STOP CHARGING.....	22
5.1.3.3.2 - ATTACHED CABLE MODEL	23
5.1.3.3.2.1 - VEHICLE CONNECTION & CHARGING	23
5.1.3.3.2.2 - STOP CHARGING	24

5.1.3.4 - APPLICATION MODES	25
5.1.3.4.1- ECO CHARGE MODE	25
5.1.3.4.2- DELAY CHARGE FUNCTION	25
5.1.3.4.3 - LOCKABLE CABLE FUNCTION	26
5.1.3.4.4 - MASTER AND USER RFID CARD RESET	26
5.1.3.4.5 - POWER OPTIMIZER SETTINGS.....	27
5.1.4 - RFID LOCAL LIST AUTHORIZED MODE & ACCEPT ALL RFIDS MODE	28
5.1.4.1 - SOCKET EQUIPPED MODEL	28
5.1.4.1.1 - VEHICLE CONNECTION & CHARGING	28
5.1.4.1.2 - STOP CHARGING	29
5.1.4.2.1 - VEHICLE CONNECTION & CHARGING	30
5.1.4.2.2 - STOP CHARGING	31
5.2 - OCPP CENTRAL SYSTEM CONNECTED MODE (OPTIONAL)	32
5.2.1 - SOCKET EQUIPPED MODEL	32
5.2.1.1 - VEHICLE CONNECTION & CHARGING.....	32
5.2.1.2 - STOP CHARGING	33
5.2.2 - ATTACHED CABLE MODEL	34
5.2.2.1 - VEHICLE CONNECTION & CHARGING	34
5.2.2.2 - STOP CHARGING.....	35
5.2.3 - OCPP 1.6 JSON ADDITIONAL FEATURES	36
5.2.3.1 - RESERVATION FEATURE	36
5.2.3.2 - REMOTE CHARGE INITIATION / TERMINATION.....	36
5.2.3.3 - HARD RESET/ SOFT RESET.....	36
5.2.3.4 - UNLOCKING THE SOCKET	36
5.3 - PLUG & CHARGE (OPTIONAL).....	37
5.3.1 - SOCKET EQUIPPED MODEL	37
5.3.1.1 - VEHICLE CONNECTION & CHARGING.....	37
5.3.1.2 - STOP CHARGING.....	37
5.3.2 - ATTACHED CABLE MODEL	38
5.3.2.1 - VEHICLE CONNECTION & CHARGING	38
5.3.2.2 - STOP CHARGING.....	38
6 - LOCKED CABLE FUNCTION (MODEL WITH SOCKET).....	39
7 - MID METER MODELS (OPTIONAL).....	40
8 - ERROR AND FAULT CONDITIONS	40
8.1 - GENERAL ERROR CONDITION	40
8.2 - OTHER ERROR CONDITIONS.....	41
8.3 - TRIPPING RELAY ON PRODUCTS WITH RESIDUAL CURRENT DEVICE (OPTIONAL)	42
8.3.1 - TRIPPING THE RESIDUAL CURRENT DEVICE.....	42
8.3.2 - DC 6MA LEAKAGE CURRENT SENSOR BEHAVIOR	42
9 - CLEANING SAFETY WARNING.....	42
10 - UK REGULATION CHANGES ACCORDING TO SMART CHARGING (OPTIONAL).....	43

1 - SAFETY INFORMATION



CAUTION RISK OF ELECTRIC SHOCK



CAUTION: ELECTRIC VEHICLE CHARGER DEVICE SHALL BE MOUNTED BY A LICENSED OR AN EXPERIENCED ELECTRICIAN AS PER ANY REGIONAL OR NATIONAL ELECTRIC REGULATIONS AND STANDARDS IN EFFECT.



CAUTION



AC grid connection and load planning of the electric vehicle charging device shall be reviewed and approved by authorities as specified by the regional or national electric regulations and standards in effect.

For multiple electric vehicle charger installations the load plan shall be established accordingly. The manufacturer shall not be held liable directly or indirectly for any reason whatsoever in the event of damages and risks that are borne of errors due to AC grid supply connection or load planning.

IMPORTANT - Please read these instructions fully before installing or operating

1.1 - SAFETY WARNINGS

- Keep this manual in a safe place. These safety and operating instructions must be kept in a safe place for future reference.
- Check that the voltage marked on the rating label and do not use charging station without appropriate mains voltage.
- Do not continue to operate the unit if you are in any doubt about it working normally, or if it is damaged in any way - switch off the mains supply circuit breakers (MCB and RCCB). Consult your local dealer.
- The ambient temperature range should be between -35°C and $+55^{\circ}\text{C}$ without direct sunlight and at a relative humidity of between 5 % and 95 %. Use the charging station only within these specified operating condition. If product has RCCB, the ambient temperature range should be between -25°C and $+50^{\circ}\text{C}$ without direct sunlight.
- The device location should be selected to avoid excessive heating of the charging station. High operating temperature caused by direct sunlight or heating sources, may cause reduction of charging current or temporary interruption of charging process.
- The charging station is intended for outdoor and indoor use. It can also be used in public places.
- To reduce the risk of fire, electric shock or product damage, do not expose this unit to severe rain, snow, electrical storm or other severe weathers. Moreover, the charging station shall not be exposed to spilled or splashed liquids.
- Do not touch end terminals, electric vehicle connector and other hazardous live parts of the charging station with sharp metallic objects.

- Avoid exposure to heat sources and place the unit away from flammable, explosive, harsh, or combustible materials, chemicals, or vapors.
- Risk of Explosion. This equipment has internal arcing or sparking parts which should not be exposed to flammable vapors. It should not be located in a recessed area or below floor level.
- This device is intended only for charging vehicles not requiring ventilation during charging.
- To prevent risk of explosion and electric shock, ensure that the specified Circuit Breaker and RCD are connected to building grid.
- The lowest part of the socket-outlet shall be located at a height between 0,5 m and 1,5 m above ground level.
- The use of adapters is not allowed. The use of extension cables is not allowed.
- Use this product at an altitude of less than 3000 meters above sea level.
- This charging station is either pole-mounted or wall-mounted.
- Do not place items filled with liquid, such as cups, bottles, etc., on the product.
- Keep the plastic packing materials out of the reach of babies, small children, and pets to avoid the danger of suffocation.
- Do not wash the device with water.
- Do not use abrasive clothes, wet clothes, alcohol, or detergents. A microfiber cloth is recommended.
- It should be kept in its original box in order not to damage the components of the device during transportation.
- Defects and damage that occur during transportation after the delivery of the product to the customer are not covered by the warranty.

“MANUFACTURER DOES NOT WARRANT THAT THE OPERATION OF THE PRODUCT WILL BE UNINTERRUPTED OR ERROR-FREE.”



WARNING: Never let people (including children) with reduced physical, sensory or mental capabilities or lack of experience and or knowledge use electrical devices unsupervised.



CAUTION: This vehicle charger unit is intended only for charging electric vehicles not requiring ventilation during charging.

1.2- GROUNDING WARNINGS

- Charging station must be connected to a centrally grounded system. The ground conductor entering the charging station must be connected to the equipment grounding lug inside the charger. This should be run with circuit conductors and connected to the equipment grounding bar or lead on the charging station. Connections to the charging station are the responsibility of the installer and purchaser.
- To reduce the risk of electrical shock, connect only to properly grounded outlets.
- **WARNING:** Make sure that during installing and using, the charging station is constantly and properly grounded.

1.3 - WARNINGS ABOUT POWER CABLES, SOCKETS and CHARGING CABLES

- Be sure that charging cable is Type 2 socket compatible on charging station side.
- A damaged charging cable can cause fire or give you an electric shock. Do not use this product if the flexible Charging cable or vehicle cable is frayed, has broken insulation, or shows any other signs of damage.
- Ensure that the charge cable is well positioned thus; it will not be stepped on, tripped over, or subjected to damage or stress.
- Do not forcefully pull the charge cable or damage it with sharp objects.
- Never touch the power cable/plug or vehicle cable with wet hands as this could cause a short circuit or electric shock.
- To avoid a risk of fire or electric shock, do not use this device with an extension cable. If the mains cable or vehicle cable is damaged it must be replaced by the manufacturer, its service agent, or similarly qualified persons in order to avoid a hazard.


1.4 - WARNING FOR WALL INSTALLATION

- Read the instructions before mounting your charging station on the wall.
- Do not install the charging station on a ceiling or inclined wall.
- Use the specified wall mounting screws and other accessories.
- This unit is rated for indoor or outdoor installation. If this unit is mounted outdoors, the hardware for connecting the conduits to the unit must be rated for outdoor installation and be installed properly to maintain the proper IP rating on the unit.


2 - GENERAL INFORMATION

2.1 - INTRODUCTION TO THE PRODUCT COMPONENTS

Socket Equipped Models

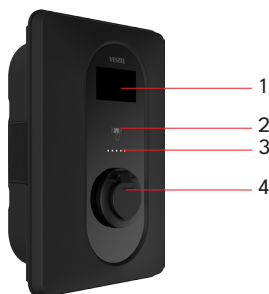

Tethered Cable Model

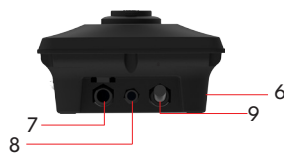

EN Socket Models

- 1-** Information Display
- 2-** RFID Card Reader
- 3-** LED Status Indicator
- 4-** Charging Socket
- 5-** Product Label
- 6-** Charging station supply connection cable gland nut
- 7-** Charging station Ethernet connection cable gland nut

EN Tethered Cable Models

- 1-** Information Display
- 2-** RFID Card Reader
- 3-** LED Status Indicator
- 4-** Dummy Socket
- 5-** Charging Plug
- 6-** Product Label
- 7-** Charging station supply connection cable gland nut
- 8-** Charging station Ethernet connection cable gland nut
- 9-** Charging Cable

2.2 - CONNECT CHARGING CABLE


2.2.1 - MODEL WITH SOCKET

Open the front cover of the socket outlet and insert the charging cable to the socket outlet.




2.2.2 - MODEL WITH TETHERED CABLE

Press the button on top of the charging plug holder in order to release charging plug from the charger. Then plug the charging plug into the vehicle socket.

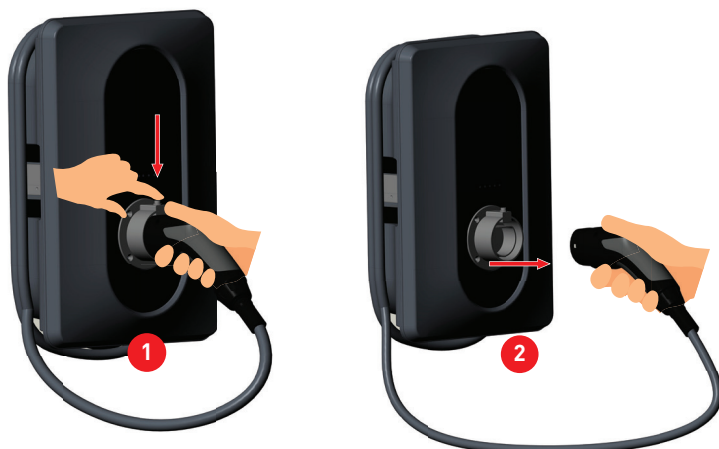

2.3 - LED STATUS INDICATOR INFORMATION

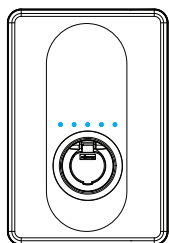

Status of the LED		Status of the Charging Station
	Blinks Blue and Green	Charging station is starting up / booting.
	No LED Indication	Charging device is ready to charge
	Blinks blue	Electric Vehicle is connected. Charging Station is waiting for RFID card authorisation.
	Green Glowing	Charging is authenticated.
	Blue Glowing	Charging in progress
	Constant Blue	Charging suspended or finished.
	Constant Red	Fault condition
	Blinks red	Ventilation required mode
	Blinks purple	Charging with current limited to 16A due to over temperature
	Blinks purple 2,4 seconds OFF 1,2 seconds ON	TIC Communication Error
	Constant Purple	Charging not possible due to over temperature or power optimizer current limit is reached or the charger is disabled
	Blinks Red 10 seconds ON 2 seconds OFF	Over Voltage, Under Voltage, Protective Earth Or Phase Reversal Fault, Installation Error
	Blinks red and blue	Charging station is reserved. Charging station is waiting for Eco Time interval and Waiting in Peak Hours Mode.
	Constant Red	Firmware update
	Blinks red Per second for 60 seconds	Master Card Config mode / Local Card List Reset

Status of the LED		Status of the Charging Station
	Blinks blue in every 2 secs	Waiting to Tap User RFID card or configure Drive Green from the smartphone
	Blinks green for 2 times	User RFID Card addition to local RFID list
	Blinks red for 2 times	User RFID card removes from local RFID list
	Green Glowing	Authorized RFID Card is tapped while charging cable is connected
	Glows green for 30 secs	Authorized RFID Card is tapped while charging cable is not connected
	Blinks red for 3 times	Start/stop charging attempt with unauthorized RFID card
	Constant Yellow	Altered Firmware
	Constant Yellow	Communication error between Smart Board and Power Board
	Blinking Yellow	Tamper switch is activated
	Blinks Green 500msec ON 500msec OFF	Randomized Delay (Only UK)
	Blinks purple 3 seconds OFF 1,2 seconds ON	Master Slave communication failure External meter communication failure
	Constant Purple	DIm total current limit is reached
	Blue Glowing	G100 State1 and State2
	Constant Purple	G100 State3

3 - DESCRIPTION

Model Name	<u>MODEL DESCRIPTION: EVC04-AC*****</u> EVC04 : Electric Vehicle AC Charger (Mechanical Cabinet 04) 1st Asterisk (*) : Rated Power 7 : 7.4 kW (1Phase Supply Equipment) 11 : 11 kW (3Phase Supply Equipment) 22 : 22 kW (3Phase Supply Equipment) 2nd Asterisk (*) can include combinations of the following communication module options. RFID reader is standard equipment for all of the model variants. "S" or "HS" option must be included for selecting combinations of W,L and P: Blank : No connectivity module except RFID reader S : Smart Board with Ethernet Port HS : High Secure Smart Board with Ethernet Port W : Wi-Fi module or WiFi & Bluetooth module L : LTE / 3G / 2G module P : ISO 15118 PLC module 3rd Asterisk (*) : Can be one of the following: Blank : No Display D : 4.3" TFT color display 4th Asterisk (*) can be one of the following: Blank : No RCCB A : Charging unit with Type-A RCCB MID : Charging unit with MID Meter PEN : Broken PEN detection and disconnection function - EICH : Charging Unit with Eichrecht Conformity 5th Asterisk (*) can be one of the following: Blank : Case-B Connection with normal socket -T2S : Case-B Connection with shuttered socket -T2P : Case-C Connection with Type-2 vehicle connector -T1P : Case-C Connection with Type-1 vehicle connector -T1PUL : Case C Connection with Type-1 UL vehicle connector 6th Asterisk (*) can be one of the following: Blank : EVC04 standard cabinet ZEN : Zenith Cabinet LIB : Libra Cabinet
Cabinet	EVC04

4 - TECHNICAL SPECIFICATION (Socket and Tethered Models)

This product is compliant to IEC61851-1 (Ed3.0) and IEC61851-21-2 standard for Mode 3 use.

Model		EVC04-AC22 Series	EVC04-AC11 Series	EVC04-AC7 Series
IEC Protection class		Class - I		
Vehicle Interface	Model with socket	Socket TYPE 2 (IEC 62196)		
	Cable Model	Cable with TYPE 2 (IEC 62196) Female Plug		
Voltage and Current Rates		230/400V ~ 50 Hz - 3-Phase 32A	230/400V ~ 50 Hz - 3-Phase 16A	230 V ~ 50 Hz - 1-Phase 32A
PEN Fault Detection Voltage Range (Optional)		NA	NA	<208V , >254V Single phase TN-C-S supplies only
AC Maximum Charge Output		22kW	11kW	7.4kW
Built-in Residual Current Sensing module		6mA		
Required Circuit Breaker on AC Mains		4P-40A MCB Type-C	4P-20A MCB Type-C	2P-40A MCB Type-C
Required Leakage Current Relay on AC Mains (for products which are not equipped with RCCB Type A)		4P -40A - 30mA RCCB Type-A	4P -20A - 30mA RCCB Type-A	2P -40A - 30mA RCCB Type-A
Required Surge Arrester on AC Mains (for installations other than residential areas)		4P-12.5kA-SPD Type-2	4P-12.5kA-SPD Type-2	2P-12.5kA-SPD Type-2
Required AC Mains Cable		5x 6 mm ² (< 50 m) External Dimensions: Ø 18-25 mm	5x4 mm ² (< 50 m) External Dimensions: Ø 18-25 mm	3x 6 mm ² (< 50 m) External Dimensions: Ø 13-18 mm
Required AC Mains Cable (Optionally only for France)		5 x 10 mm ² (< 50 m) External Dimensions: Ø 18-25 mm	5 x 2.5 mm ² (< 50 m) External Dimensions: Ø 18-25 mm	3 x 10 mm ² (< 50 m) External Dimensions: Ø 13-18 mm

CONNECTIVITY

Ethernet	10/100 Mbps Ethernet (Standard with Smart Options)
Wi-Fi (Optional)	Wi-Fi 802.11 a/b/g/n/ac
Cellular (Optional)	LTE: B1 (2100 MHz), B3 (1800 MHz), B7 (2600 MHz), B8 (900 MHz), B20 (800 MHz), B28A (700 MHz) WCDMA: B1 (2100 MHz), B8 (900 MHz) GSM: B3 (1800 MHz), B8 (900 MHz)

OTHER FEATURES (Connected Models)

Diagnostics	Diagnostics over OCPP WebconfigUI
Software Update	Remote software update over OCPP WebconfigUI update Remote software update with server

AUTHORIZATION

RFID	ISO-14443A/B and ISO-15693
PLUG & CHARGE (Optional)	ISO-15118-2

MECHANICAL SPECIFICATIONS

Material	Plastic
Product size	315 mm (Width) x 460 mm (Height) x 165 mm (Depth)
Dimensions (with package)	405 mm (Width) x 530 mm (Height) x 345 mm (Depth)
Product weight	5,6 kg for MODEL WITH SOCKET, 6,7kg for MODEL WITH TETHERED CABLE (3 Phases) 5,5kg for MODEL WITH TETHERED CABLE (1 Phase)
Weight with package	7,1 kg for MODEL WITH SOCKET, 8,9kg for MODEL WITH TETHERED CABLE (3 Phases) 7,6kg for MODEL WITH TETHERED CABLE (1 Phase)
AC Mains Cable Dimensions	For three-phase models Ø 18-25 mm For single-phase models Ø 13-25 mm
Cable Inlets	AC Mains / Ethernet / Modbus

ENVIRONMENTAL TECHNICAL SPECIFICATIONS


Protection Class	Ingress Protection Impact Protection	IP54 IK10
Usage Conditions	Temperature Humidity Altitude	-35 °C to 55 °C (without direct sunlight) -25 °C to 50 °C (optionally product has RCCB) 5% - 95% (relative humidity, without condensation) 0 - 4,000m

5 - CHARGING

Your charging station is configured to be used in authorized charging mode by default. Check authorized charging mode behavior details in below section.

5.1 - STANDALONE USAGE MODES

First usage of “Standalone Usage” mode charger: Your charger’s master RFID card is already registered to your charger and you can find the master RFID card in accessories. When your charger is powered on for the first time, it opens in “onboarding” screens as shown figure below. If you do not make any configuration in onboarding screens for 60 seconds and connect your charging cable, your charging station starts in autostart mode automatically.

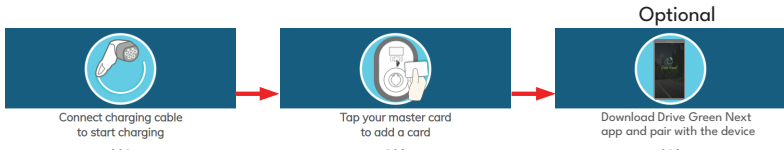

5.1.1 - AUTOSTART CHARGING MODE


Your charging station behaves in autostart charging mode as mentioned below:

- a) If you do not make any configuration in configuration mode for 60 seconds and connect your charging cable, your charging station starts in autostart mode automatically.
- b) If you delete the last RFID card from the local RFID card list, then your charger starts to behave as autostart mode.


5.1.1.1 - SOCKET EQUIPPED MODEL

5.1.1.1.1 - VEHICLE CONNECTION & CHARGING


1 - Ensure that your vehicle and the station is ready for charging.

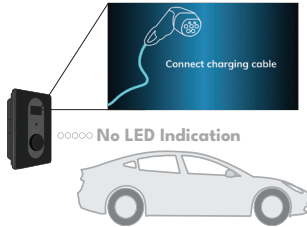

2 - Insert the charging plug to the vehicle inlet and charging station socket outlet.

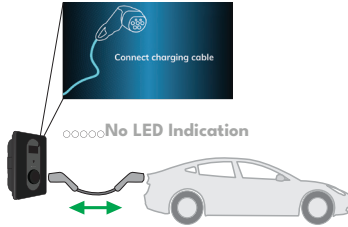


3 - Charging starts automatically, and status indicator LED glows in blue.

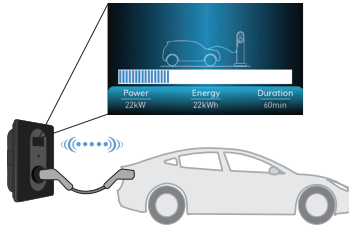


5.1.1.1.2 - STOP CHARGING

1- Unplug the charging cable from the vehicle first to stop charging. Do not attempt to remove the plug from the station before unplugging it from the vehicle. Otherwise locking mechanism may get damaged.

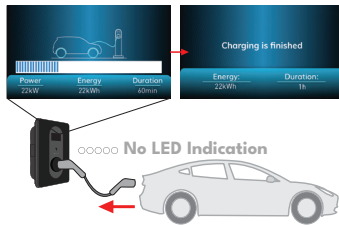


2 - Unplug the charging cable from the station.

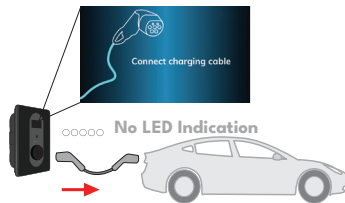


5.1.1.2 - ATTACHED CABLE MODEL

5.1.1.2.1 - VEHICLE CONNECTION & CHARGING


1 - Ensure that your vehicle and the station are ready for charging.

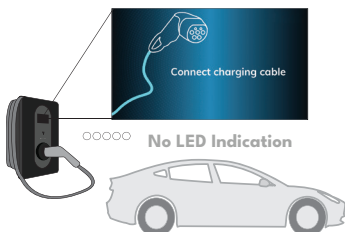

2 - Insert the charging plug into the vehicle socket.

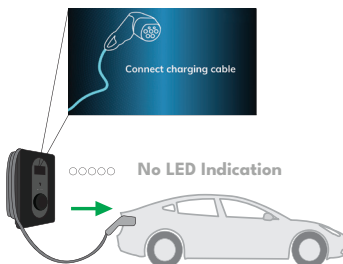


3 - Charging starts and the LED status indicator glows in blue.

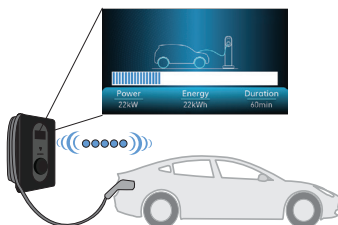


5.1.1.2.2 - STOP CHARGING

1 - You can stop the charging session by removing the charging cable from the vehicle.

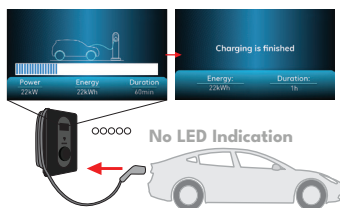

2 - Insert the charging plug into the charging plug holder of the station.

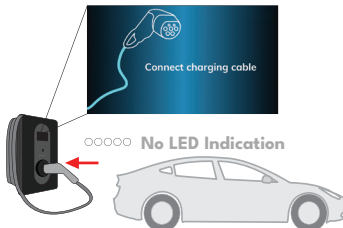

NOTE : If you delete the last RFID card from the local RFID card list, then your charger starts to behave as autostart (plug&charge) mode.

5.1.2 - RFID AUTHORIZED MODE

5.1.2.1 - REGISTERING USER RFID CARD





In standalone usage mode, the master RFID card is already registered to your charger. If you tap the master RFID card to your charging station when the charging cable is not connected, you can access the bluetooth connection or you can add a user RFID card to the local RFID list. This configuration mode will last for 60 seconds and the status LED indicator will be blue blinking. You can add/delete your user RFID card. If you do not make any configuration in 60 seconds, charging station exists from configuration mode and returns to its previous mode.

5.1.2.1.1 - ADD/DELETE RFID CARD TO/FROM LOCAL RFID LIST


Access configuration mode as outline above. If you tap any user RFID card which is not in Local RFID list, it will be added to the local list. If you tap a user RFID card which is currently stored in the local list, it will be deleted from the list. If you delete the last RFID card from the local RFID card list, then your charger starts to behave as autostart mode.

5.1.2.2 - SOCKET EQUIPPED MODEL

5.1.2.2.1 - VEHICLE CONNECTION & CHARGING

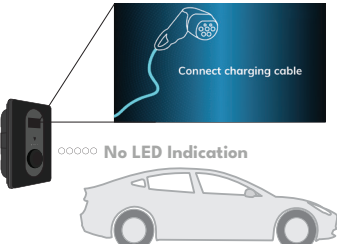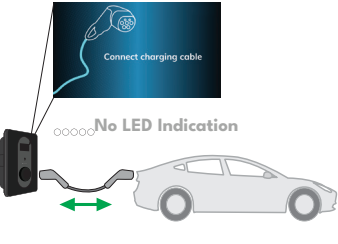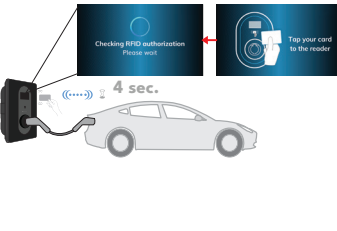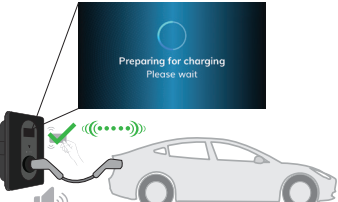1 - Ensure that your vehicle and the station is ready for charging. 	2 - Insert the charging plug to the vehicle inlet and charging station socket outlet. 
3 - Tap the user RFID card to the reader. 	4 - You may start charging with a card that has been authorized before. 

5 - Charging starts and status indicator LED glows in blue.

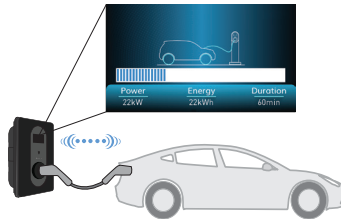


NOTE : Charging operation is rejected by the charging station when you want to start charging with an unauthorized card. It takes around one minute to reboot your charging station after it resets.


5.1.2.2- STOP CHARGING

1- You may follow the alternative methods specified below to stop charging. Do not attempt to unplug the charging cable from the station before stopping charging otherwise locking mechanism may get damaged.


Method1. You can terminate charging by tapping the RFID card that you have started charging before.

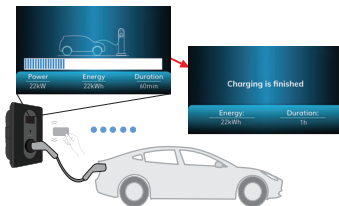

Method2. You may stop charging by unplugging the charging cable from the vehicle first.

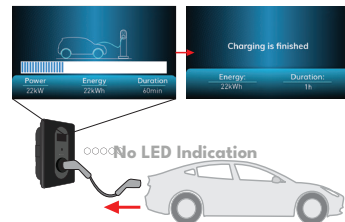


2 - Unplug the charging cable from the station.

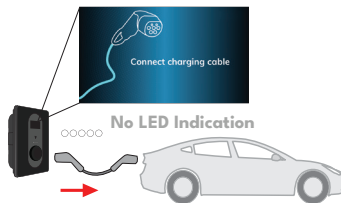

5.1.2.3 - ATTACHED CABLE MODEL

5.1.2.3.1 - VEHICLE CONNECTION & CHARGING

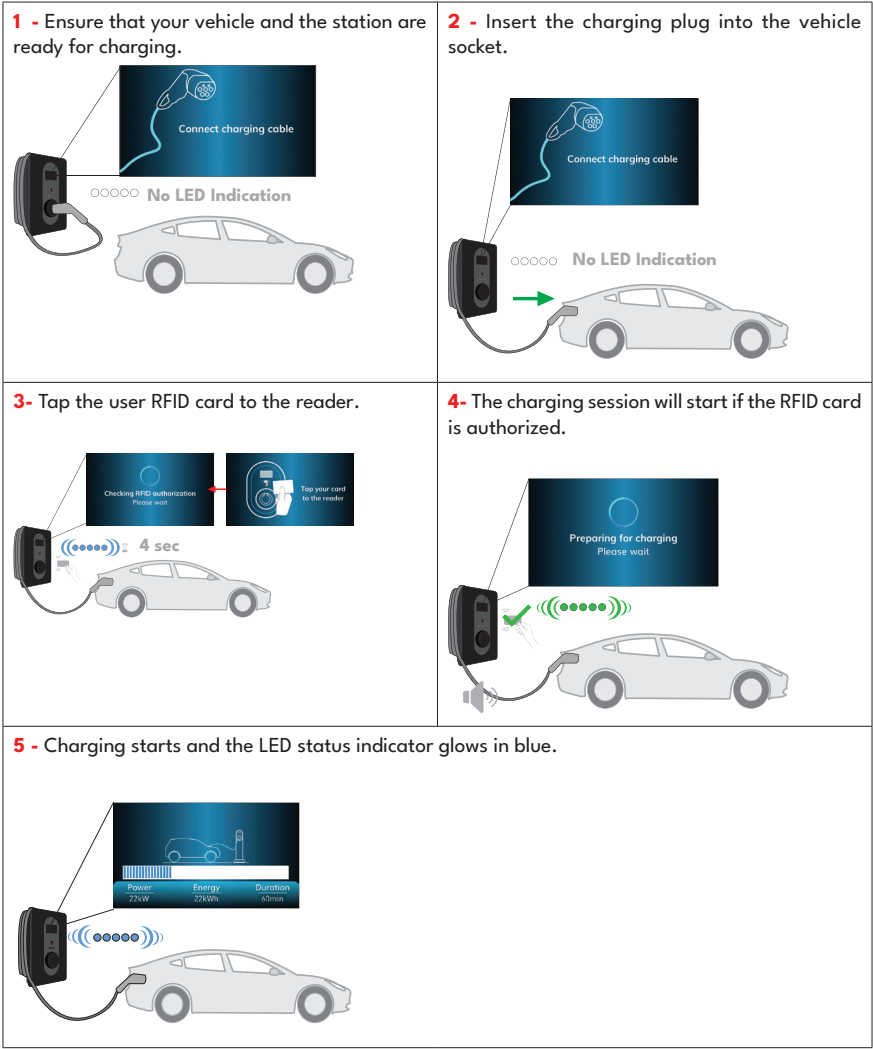


NOTE: The charging session will be rejected if an unauthorized RFID card is used. The LED status indicator will blink red 3 times.


5.1.2.3.2 - STOP CHARGING

1- You may follow the alternative methods specified below to stop charging.


Method 1. The charging session can be stopped by tapping the RFID card that was used to start the session.

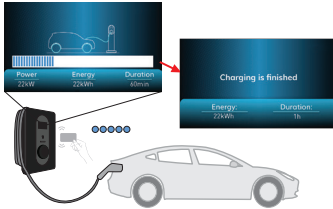

Method 2. You can stop the charging session by removing the charging cable from the vehicle.

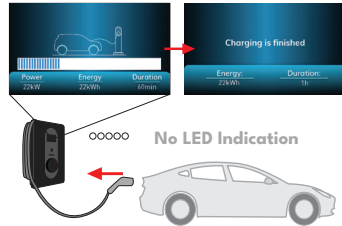

2- Insert the charging plug into the charging plug holder of the station.

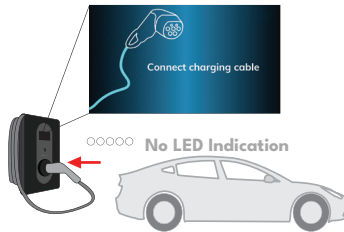

5.1.3 - SMART APPLICATION AUTHORIZED MODE (Optional with Wi-Fi)

5.1.3.1 – CONFIGURING DRIVE GREEN APPLICATION

In standalone usage mode, the master RFID card is already registered to your charger. If you tap the master RFID card to your charging station when the charging cable is not connected, you can access the bluetooth connection of the charger. The charger will broadcast its bluetooth connection for 60 seconds, during this period the LED status indicator will blink blue. When in configuration mode you can connect a smartphone via the Drive Green Next App. If you do not make any configuration in 60 seconds, charging station exits from configuration mode and returns to its previous mode.

5.1.3.2 - DRIVE GREEN CONFIGURATION:

Please download the “Drive Green Next” application. it is available for Android or iOS.

You can scan the QR code below to access the Drive Green app.

Once the app has been downloaded and installed. Please follow the instructions within the app to connect and configure the charger.



Open Drive Green Mobile App. You will see selection of different models. To configure your charger, select EVC04 Libra model shown in picture above and click continue button and follow the instructions which are mentioned inside the application in detail to setup the charger and finish the configuration. Please note that after first configuration your EV charger and Mobile Application connect locally via Bluetooth, so you can only monitor and control your charging session when you are near the charging station. If you want to monitor and control your charging station from the Internet remotely, you need to configure Internet connection settings of your EV charger from “Connectivity” tab in “Device Settings” menu. You can either use Ethernet LAN connectivity or WiFi WLAN connectivity option.

5.1.3.3 - VEHICLE CONNECTION & CHARGING

On completion of Drive Green App configuration you will be able to control your charger via the APP or authorised RFID card.


Your charger will behave in autostart mode, but you will be able to control the charger with the App:

- a) If you do not make any configuration in configuration mode for 60 seconds and connect your charging cable, your charging station starts in autostart mode automatically.
- b) If you delete the last RFID card from the local RFID card list, then your charger starts to behave as autostart mode.


5.1.3.3.1 - SOCKET EQUIPPED MODEL

5.1.3.3.1.1 - VEHICLE CONNECTION & CHARGING


- 1 -** Ensure that your vehicle and the station is ready for charging.

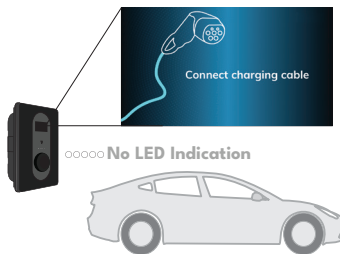

- 2 -** Insert the charging plug to the vehicle inlet and charging station socket outlet.

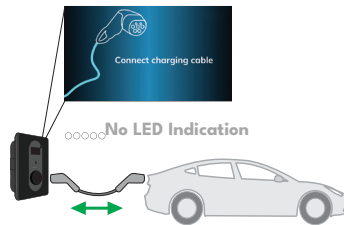


- 3 -** Tap the user RFID reader or press “Charge Now” button from the application.

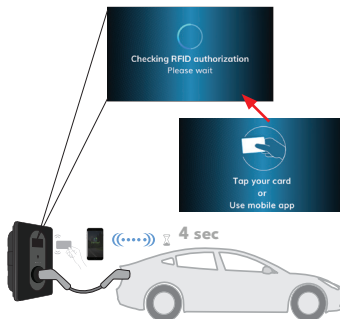

- 4 -** You may start charging with a card that has been authorized before or after pressing “Charge Now” button in mobile application.



- 5 -** Charging starts and status indicator LED glows in blue.

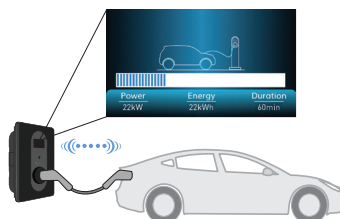


NOTE : Charging operation is rejected by the charging station when you want to start charging with an unauthorized card. It takes around one minute to reboot your charging station after it resets.


5.1.3.3.1.2 - STOP CHARGING

1- You may follow the alternative methods specified below to stop charging. Do not attempt to unplug the charging cable from the station before stopping charging otherwise locking mechanism may get damaged.


Method1. You can terminate charging by tapping the RFID card that you have started charging before.

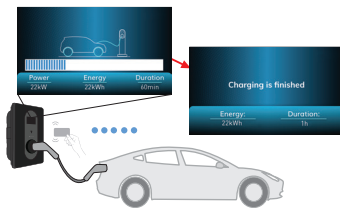


Method2. You may stop charging by pressing “STOP” button in mobile application in your smartphone.

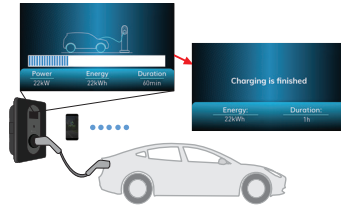

Method3. You may stop charging by unplugging the charging cable from the vehicle.

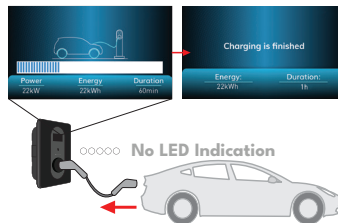


2 - Unplug the charging cable from vehicle first and then from your charging station.

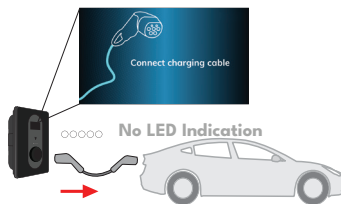

5.1.3.3.2 - ATTACHED CABLE MODEL

5.1.3.3.2.1 - VEHICLE CONNECTION & CHARGING

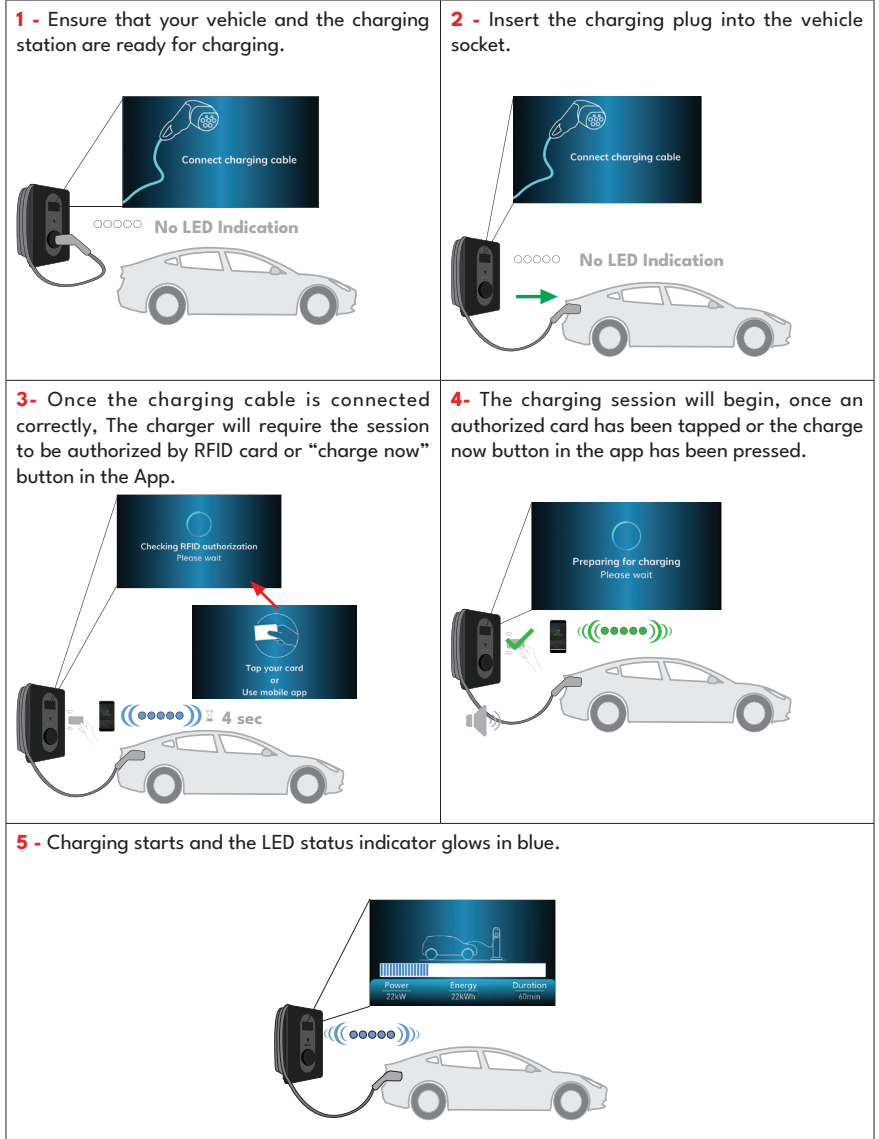


NOTE: The charging session will be rejected if an unauthorized RFID card is used. The LED status indicator will blink red 3 times.


5.1.3.3.2.2 - STOP CHARGING

1- You may follow the alternative methods specified below to stop charging.


Method 1. The charging session can be topped by tapping the RFID card that was used to start the session.

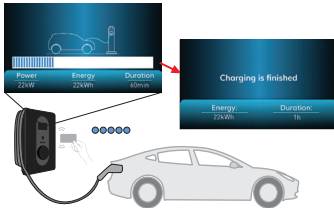


Method 2. You may stop charging by pressing “STOP” button in mobile application on your smartphone.

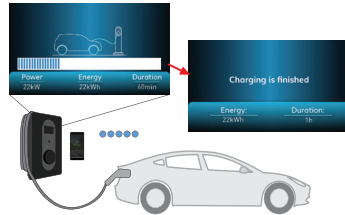

Method 3. You may stop charging by unplugging the charging cable from the vehicle.

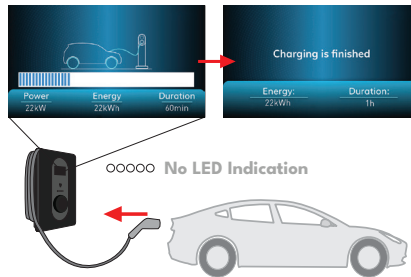

2- Unplug the charging cable from vehicle and insert the charging plug to the charging plug holder of the station.

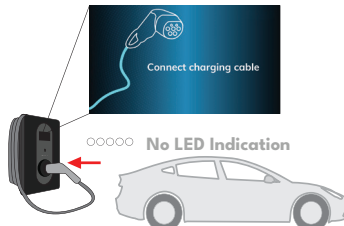


5.1.3.4 - APPLICATION MODES

5.1.3.4.1- ECO CHARGE MODE

Eco Charge Mode is a function, in which the user can set peak hours of electricity usage and manage the charging session to avoid these times. When Eco Charge is activated, charging start and finish intervals can be set.

If a charging session starts during eco time, the session will start and finish as normal. If a charging session starts outside eco time, the session will be suspended until the eco time is available.

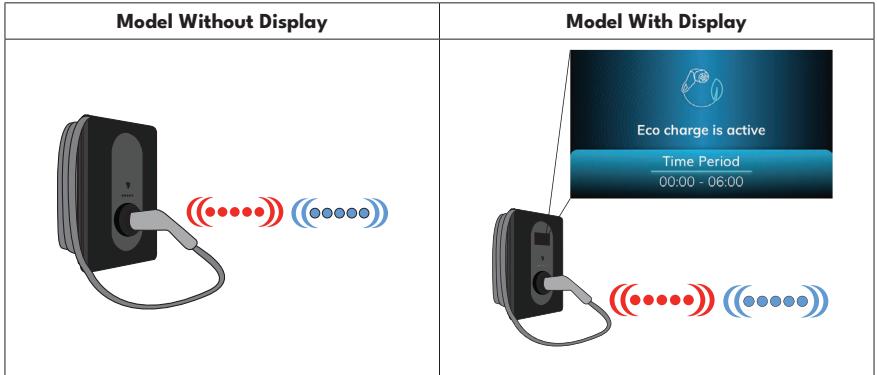

- When in ECO mode, once the charging cable is connected correctly, the session will need to be authorised by either the “charge now” button or an authorised RFID card. The session will begin once the set ECO time has been reached.
- To force a charging session whilst waiting for eco time, the charge “now button” will need to be pressed again or the authorised RFID card will need to be presented again.
- When in ECO Mode with a charging cable and car connected and waiting for ECO time, the LED status indicator will flash blue and red.
- When waiting for the eco time to start the LED status indicator will flash blue and red. after a 5 minute period the LED status indicator will stop flashing. When the eco time period has expired, the charging session will be suspended and the LED status indicator will flash blue and red. After a 5 minute period the LED will stop flashing.



If you want your electric vehicle to continue charging after Eco Charge interval finishes, you can activate this functionality in the “Schedule Charge” tab in “Continue After Eco Charge” menu.

5.1.3.4.2- DELAY CHARGE FUNCTION

You can add a delay to the start of a charging session by setting this in the App. To start charging in delay mode;

- Connect the vehicle to the charger as normal. Open the app and select the desired delay time period. Press “Delay Charge” button to confirm. The charging cable will be locked into place and the LED status indicator will flash blue and red.
- In your application screen, you can see that the charging station is in delay charge mode.
- You can override the delay time period and start a charging session immediately:

- a) In RFID Mode, tap an authorised RFID card or press the “charge now” button in the app to start charging session immediately.
 - b) In Autostart Mode, press the “charge now” button in the app to start the charging session immediately.
- Delay charge screen in your charging station will be as below.
 - When the charger is set as delay charging mode, the LED status indicator will flash Blue and Red. After 5 minutes the LED will stop flashing.

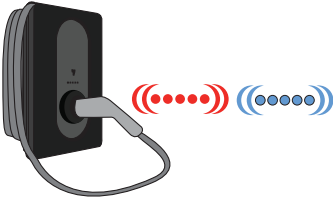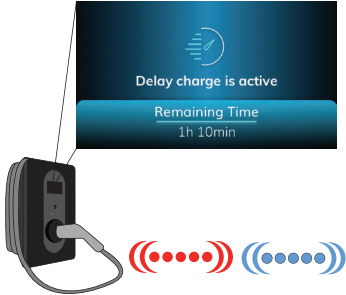Model Without Display	Model With Display
	

5.1.3.4.3 - LOCKABLE CABLE FUNCTION

For socket equipped models, it is possible to fix the charging cable to the charging station by locking the socket interlock permanently. This feature can be activated from lockable cable function in the “Advanced Settings” tab in “Device Settings” menu.


5.1.3.4.4 - MASTER AND USER RFID CARD RESET

Master and user RFID card lists can be cleared in master and user cards menu in “Advanced Settings” tab. When you reset the user RFID card list, the charging station may become plug and charge mode depending on “Free Charging” setting.

When you reset the master RFID card you need to tap new master RFID card to the reader. If a new master RFID card is not presented to the RFID reader, the former master card will keep its validity.

5.1.3.4.5 - POWER OPTIMIZER SETTINGS

This feature is provided with optional metering accessories which are sold separately. In power optimizer mode, the total current drawn from the main switch of the house by charging station and other household appliances is measured with current sensor integrated to the main power line as show in figure below. Power Optimizer feature and maximum current limit of the main power line of the system is set from “Power Optimizer” setting in “Advanced Settings” tab in “Device Settings” menu.

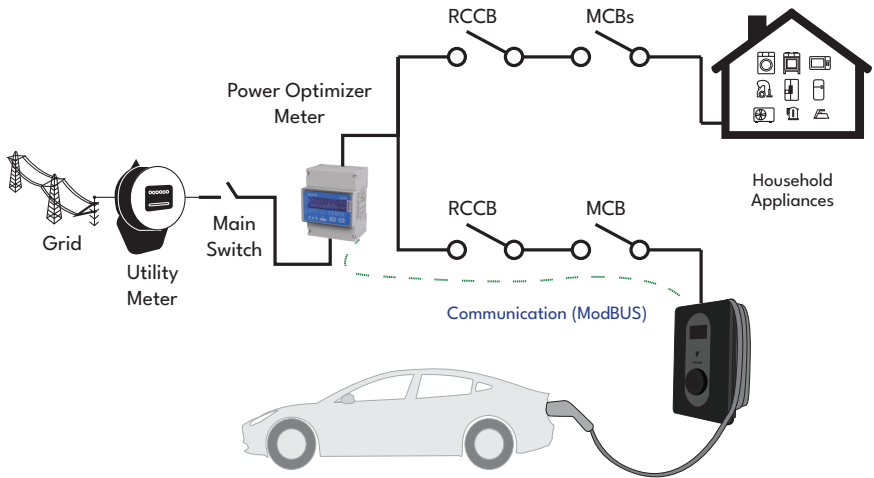

Visual Representation


5.1.4 - RFID LOCAL LIST AUTHORIZED MODE & ACCEPT ALL RFID_s MODE

Please check “STANDALONE MODE SETTINGS” in Installation Guide document.


5.1.4.1 - SOCKET EQUIPPED MODEL

5.1.4.1.1 - VEHICLE CONNECTION & CHARGING


1 - Ensure that your vehicle and the station is ready for charging.

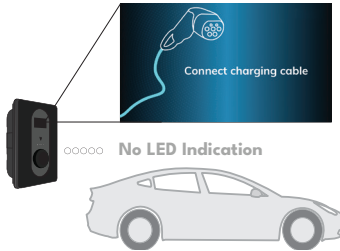

2 - Insert the charging plug to the vehicle inlet and charging station socket outlet.

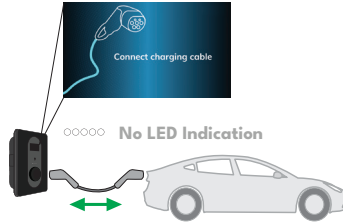

3 - Tap the RFID card to the RFID reader.

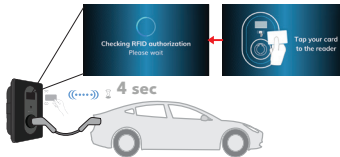


4 - You may start charging with a card that has been authorized before, if the charging station is in RFID Local List Authorized Mode.

If the charging station is in Accept ALL RFID_s Mode, then you may start charging with any supported RFID card.



5 - Charging starts and status indicator LED glows in blue.

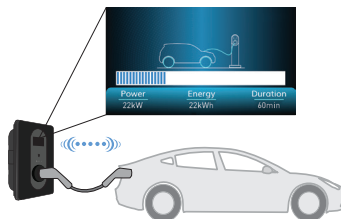


NOTE : Charging operation is rejected by the charging station when you want to start charging with an unauthorized card. It takes around one minute to reboot your charging station after it resets.


5.1.4.1.2 - STOP CHARGING

1- You may follow the alternative methods specified below to stop charging. Do not attempt to unplug the charging cable from the station before stopping charging otherwise locking mechanism may get damaged.


Method1. You can terminate charging by tapping the RFID card that you have started charging before.

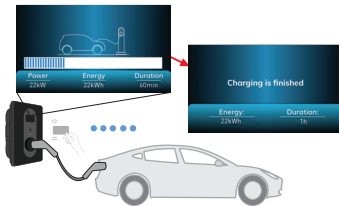

Method2. You may stop charging by unplugging the charging cable from the vehicle first.

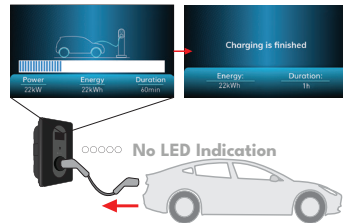


2 - Unplug the charging cable from the station.

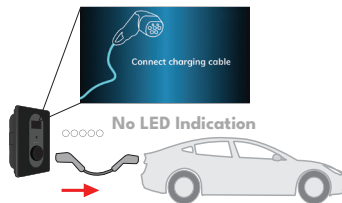


5.1.4.2 - ATTACHED CABLE MODEL

5.1.4.2.1 - VEHICLE CONNECTION & CHARGING


1 - Ensure that your vehicle and the station are ready for charging.

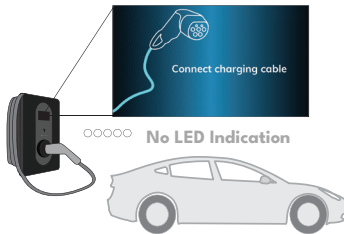


2 - Insert the charging plug into the vehicle socket.

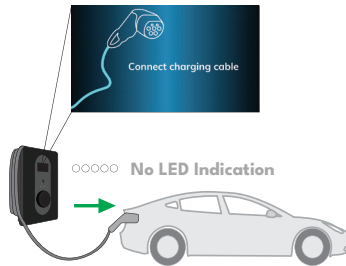


3 - Tap the RFID card to the RFID reader.

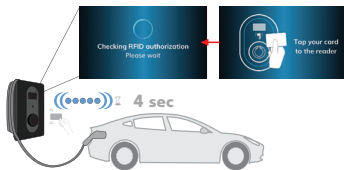

4 - If the charger has been set to RFID local list authorized mode, you can start a charging session with an authorized RFID card. Alternatively, if the charger is set to accept all RFID mode, you can start a charging session with any supported RFID card.

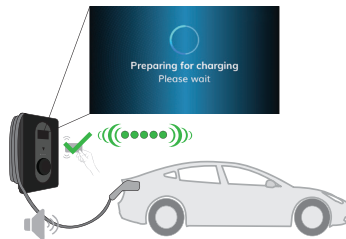

5 - Charging starts and the LED status indicator glows in blue.

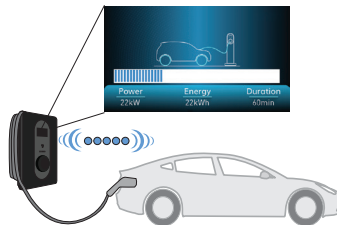


NOTE :The charging session will be rejected if an unauthorized RFID card is used. The LED status indicator will blink red 3 times.


5.1.4.2.2 - STOP CHARGING

1- You may follow the alternative methods specified below to stop charging.


Method 1. You can terminate charging by tapping the RFID card that was used to start the charging session.

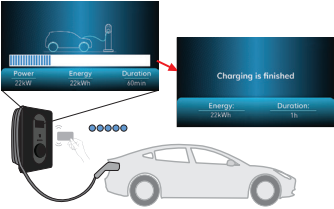

Method 2. You may stop charging by disconnecting the charging cable from the vehicle.

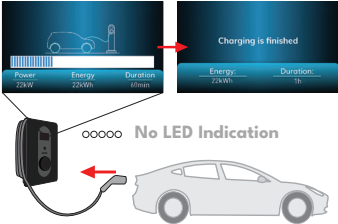





2- Insert the charging plug into the charging plug holder of the station.

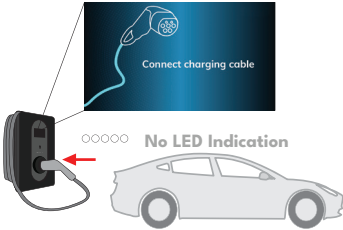

5.2 - OCPP CENTRAL SYSTEM CONNECTED MODE (Optional)

5.2.1 - SOCKET EQUIPPED MODEL

5.2.1.1 - VEHICLE CONNECTION & CHARGING

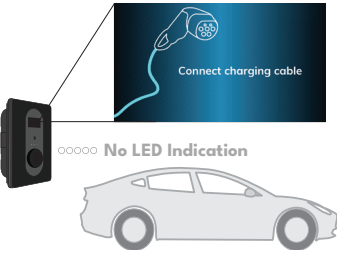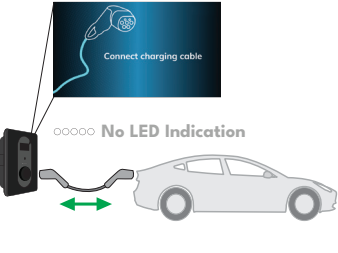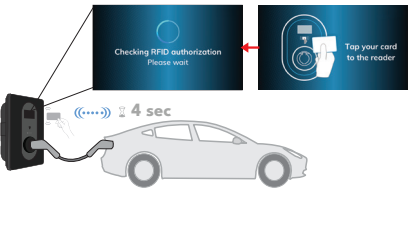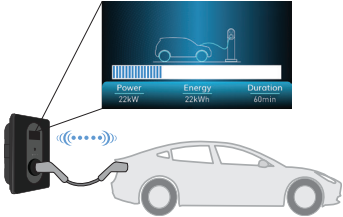
1 - Ensure that your vehicle and the station is ready for charging. 	2 - Insert the charging plug to the vehicle inlet and charging station socket outlet. 
3- Tap the RFID card to the RFID reader you may start charging with a card which is provided by your charging operator. 	4- You may start charging with a card that has been authorized before. If the RFID Card is authorized by OCPP Central System, charging will start. 
5 - Charging starts and status indicator LED glows in blue. 	

NOTE : Charging operation is rejected by the charging station when you want to start charging with an unauthorized card. It takes around one minute to reboot your charging station after it resets.


5.2.1.2 - STOP CHARGING

1- You may follow the alternative methods specified below to stop charging. Do not attempt to unplug the charging cable from the station before stopping charging otherwise locking mechanism may get damaged.


Method1. You can terminate charging by tapping the RFID card that you have started charging before.

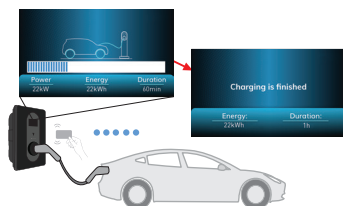

Method2. You may stop charging by unplugging the charging cable from the vehicle first.

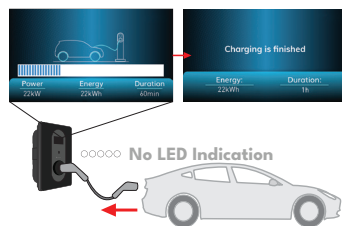


2 - Unplug the charging cable from the station.

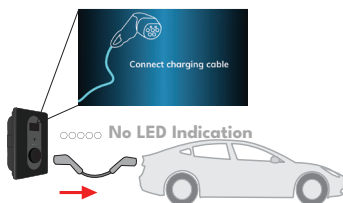

5.2.2 - ATTACHED CABLE MODEL

5.2.2.1 - VEHICLE CONNECTION & CHARGING

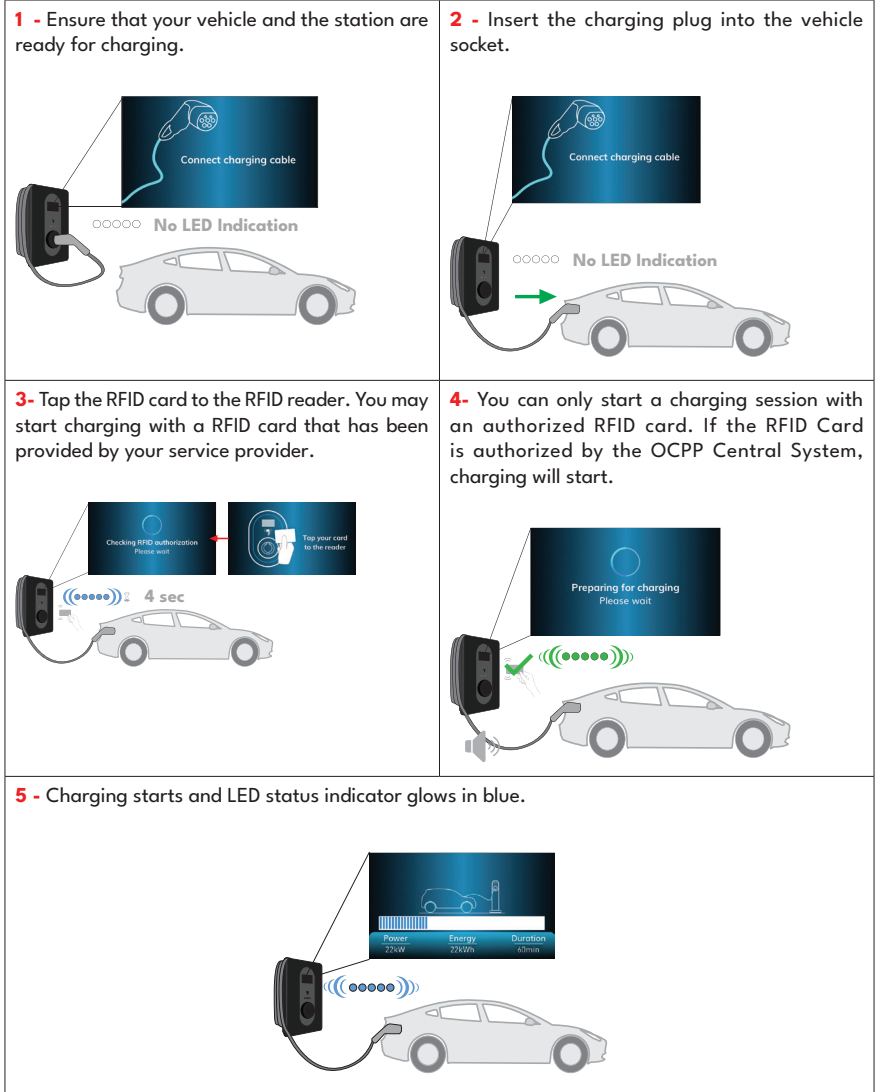


NOTE :The charging session will be rejected if an unauthorized RFID card is used. The LED status indicator will blink red 3 times.


5.2.2.2 - STOP CHARGING

1- You may follow the alternative methods specified below to stop charging.


Method 1. You can terminate charging by tapping the RFID card that was used to start the charging session.

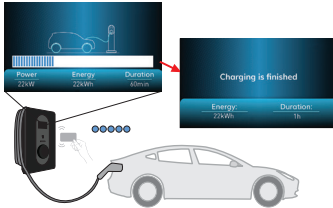

Method 2. You may stop charging by disconnecting the charging cable from the vehicle.

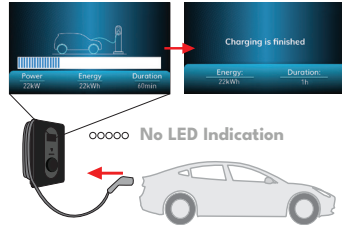

2- Insert the charging plug into the charging plug holder of the station.

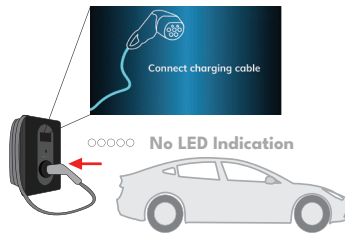



5.2.3 - OCPP 1.6 JSON ADDITIONAL FEATURES

5.2.3.1 - RESERVATION FEATURE

Reservation feature allows the user to reserve the charging station for a period of time. During this period:

- The LED will blink in red and blue.
- Only the RFID card that is used for reservation may initiate the charging process. Other cards are rejected.

If charging is not initiated until the reservation period is expired, the LED will switch to “No Light Indication” mode.

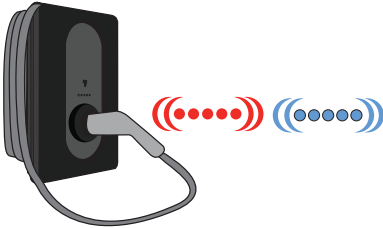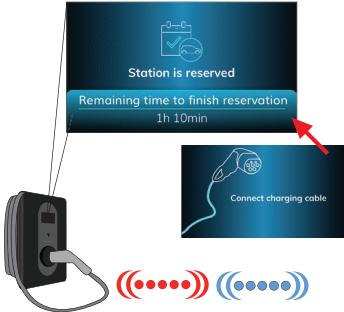Model Without Display	Model With Display
	

5.2.3.2 - REMOTE CHARGE INITIATION / TERMINATION

This feature is supported by the charging station. If it is also supported by the connected server, then charging process may be initiated/terminated remotely.

5.2.3.3 - HARD RESET/ SOFT RESET

If the electric vehicle charging station is not working properly, the service provider may restart the appliance with this feature. There are two types of restart. Software or hardware reset may be selected.

5.2.3.4 - UNLOCKING THE SOCKET

If the charging cable is locked at the station, the service provider may unlock the cable via this feature.


5.3 - PLUG & CHARGE (Optional)

PLUG & CHARGE function is only available with OCPP CENTRAL SYSTEM CONNECTED MODE activated. To charge with PLUG & CHARGE, EV shall also support the PLUG & CHARGE function.


5.3.1 - SOCKET EQUIPPED MODEL

5.3.1.1 - VEHICLE CONNECTION & CHARGING


1 - Ensure that your vehicle and the station is ready for charging.

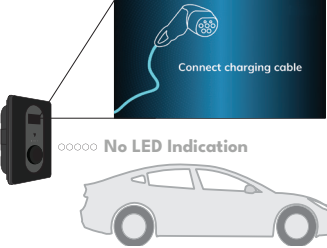

2 - Insert the charging plug to the vehicle inlet and charging station socket outlet.

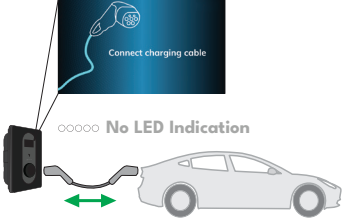


3 - Charging starts automatically, and status indicator LED glows in blue.

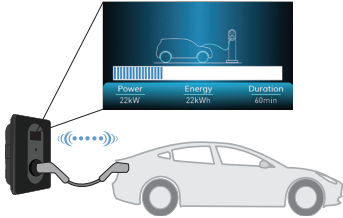


5.3.1.2 - STOP CHARGING

1 - Unplug the charging cable from the vehicle first to stop charging. Do not attempt to remove the plug from the station before unplugging it from the vehicle. Otherwise locking mechanism may get damaged.

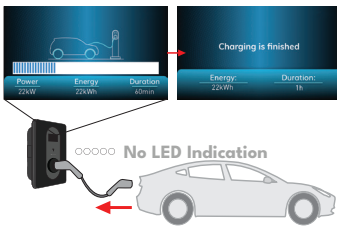


2 - Unplug the charging cable from the station.

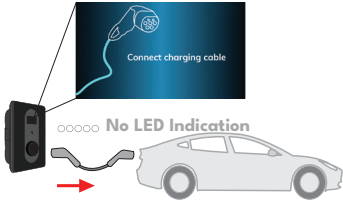


5.3.2 - ATTACHED CABLE MODEL

5.3.2.1 - VEHICLE CONNECTION & CHARGING


1 - Ensure that your vehicle and the station is ready for charging.

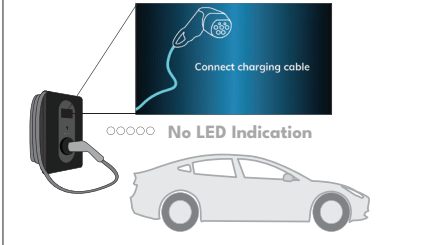

2 - Insert the charging plug to the vehicle inlet and charging station socket outlet.

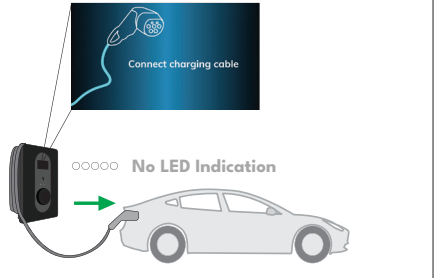


3 - Charging starts automatically, and status indicator LED glows in blue.

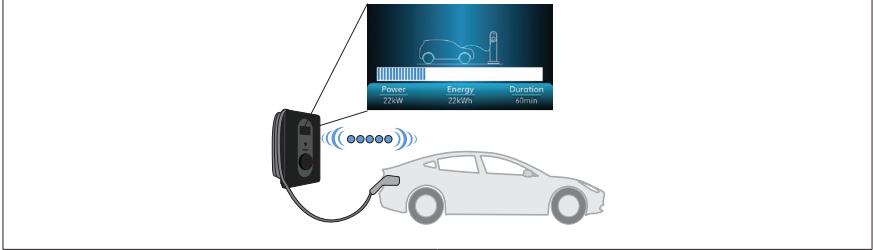


5.3.2.2 - STOP CHARGING

1- Unplug the charging cable from the vehicle first to stop charging.

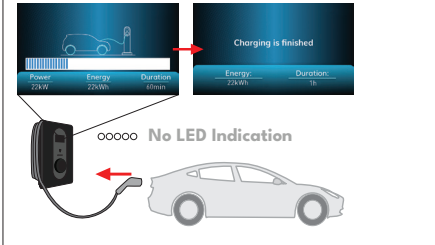

2 - Insert the charging plug to the charging plug holder of the station.

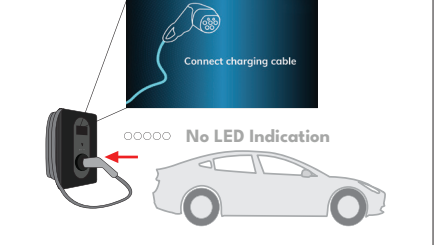


6 - LOCKED CABLE FUNCTION (Model With Socket)

The cable becomes locked and your socket model charging station starts behaving as an attached cable model.


1- Turn off the power to your charging station.




2- Open the product cover as described in the installation manual.




3- To enable locked cable function, toggle DIP switch pin 3 to ON position using pointed spudger or a plastic pointed tool. The DIP switch location is as shown in below figure.

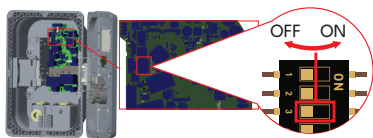

4- Close the product cover as described in the installation manual.



5- Open the front cover of the socket outlet and plug the charging cable to the socket outlet.

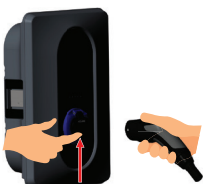


6- Turn on the power to your charging station. The cable becomes locked and the charging station starts behaving as a model with tethered cable.




7 - MID METER MODELS (Optional)

It is possible to view the total active energy on the display of the MID meter (products with MID meter).

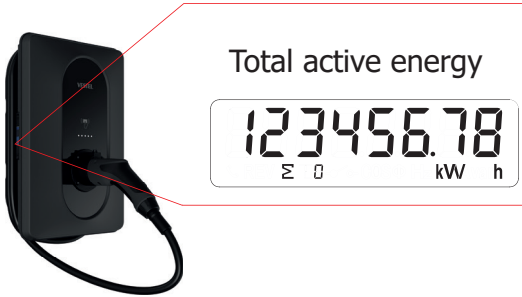

8 - ERROR AND FAULT CONDITIONS


Due to any fault, in display models, you can see “Out of order!” screen in charging station.

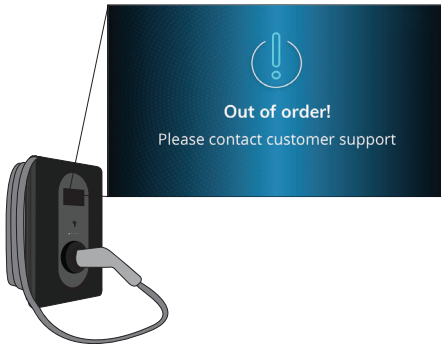

8.1 - GENERAL ERROR CONDITION

If the status information LED is constant red, turn off the charging station and turn on again.

if the LED is still constant red then contact your installer.

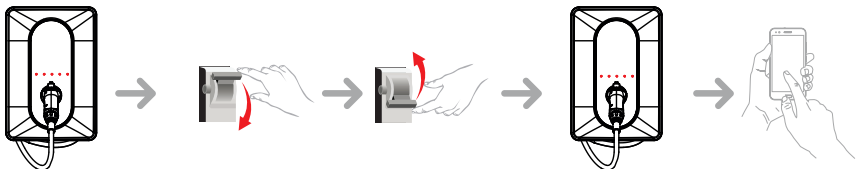

8.2 - OTHER ERROR CONDITIONS

Status Indicator	Problem	Possible Causes	Recommended Solutions
	Constant LED.	AC supply voltage may not be in the range in the operation manual, grounding connection may not be performed and/or phase/neutral connections may be reversed or the charging station may have a fault.	Please ensure that the voltage is in the specified range and that the grounding connection have been installed correctly. If the LED is still solid red, please contact your installer.
	The LED status indicator blinks in blue every four seconds, it is not possible to start charging the electric vehicle or to lock the plug in the charging station	The charging plug may not be connected properly to the charging device or the electric vehicle.	Ensure that the charging plug is connected properly on both sides. Please check if your electric vehicle is in charging mode.
	The LED status indicator blinks red	You shall see this error notification if your vehicle is equipped with a battery type that requires ventilation.	This charging station is not suitable to charge such vehicles.

NOTE: To avoid connection issues whilst configuring the charger via Bluetooth. Please ensure that you are within 10 meters of the charger until configuration is complete.


NOTE: if you face a Wi-Fi connection problem in controlling the charger please restart your router and check the connections.

8.3 - TRIPPING RELAY ON PRODUCTS WITH RESIDUAL CURRENT DEVICE (Optional)

⚠ CAUTION

8.3.1 - TRIPPING THE RESIDUAL CURRENT DEVICE

- The residual current device can be seen in the second part of the following figure. You may access the residual current device by opening the lock which is placed on the side cover as shown in the first part of the figure below. Place and push triangle key on the side cover lock then rotate the key 90 degrees counter-clockwise.
- Ensure that there is no failure on your vehicle or on the charging plug that may cause a residual current before resetting the tripped residual current device.
- After ensuring that there is no problem on your vehicle or on the charging plug, unplug the charging cable from the charging station. Then reactivate your charging station by resetting the switch as shown in the third part of the figure as shown below.
- If the problem still occurs, contact your installer. If the problem is solved, there may be some problem with your vehicle or charging cable. Please contact with your vehicle service provider.

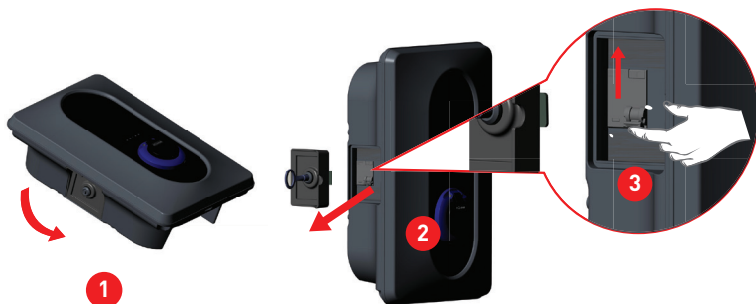

8.3.2 - DC 6mA LEAKAGE CURRENT SENSOR BEHAVIOR

The charging station is equipped with a DC leakage current sensor that reacts to a DC leakage current higher than 6mA.

If the charging station goes into error state due to DC leakage current, To reset and clear the error, the charging cable must be disconnected from the vehicle.

9 - CLEANING SAFETY WARNING

⚠ ⚠ DANGER

- Do not clean your electric vehicle charging device while charging your vehicle.
- Do not wash the device with water.
- Do not use abrasive cloths and detergents. Microfiber cloth is recommended.

Failure to follow these warnings may result in death and serious injuries. You may also cause damage to your device.

This section applies only to the United Kingdom.

10 - UK REGULATION CHANGES ACCORDING TO SMART CHARGING (OPTIONAL)

CONFIGURATION WEB INTERFACE SETTINGS

Randomised Delay and Off-Peak Charging Behaviour

a. Randomised delay won't be repeated if applied in a charging period (except after power off and second transition to off peak hour, E.g: charging starts at 15:00 and paused at 16:00, when starting at 22:00 again randomized delay will be applied again.)

b. Randomised delay and waiting for off-peak charging will be cancelled if user tap RFID card for forced charging (first tap if charging station is in autostart mode, second tap if the charging station is in authorized mode). If the unit is in autostart mode any RFID card will force a charge, if the unit is in authorized mode the authorizing card of that charging session will force charge. Forced Charge will cancel both off-peak hour waiting period and randomized delay for that charging session.

c. While starting a charge session, if the time is in a peak period, the charging start will be delayed to the upcoming off-peak period start time. Randomized delay will be applied when the charging (actual energy transfer) starts.

d. If the time is in off-peak period, the randomized delay will be applied (if enabled) and then charging will start after delay. (It is only a numerical value and should be 600 by default). During the charging session if the time shifts from off-peak to peak, charging will continue or pause according to the setting "ContinueAfterOffPeakHour".

e. If unit has a screen "Waiting for off-peak hour, charging will start at hh:mm" will be shown on the screen while OCPP mode is active.

f. If unit has a screen, "Waiting for random delay, Charging will start at hh:mm" will be shown on the screen while OCPP mode and random delay mode are active sync of the time information from the server.

g. If a unit can connect to a central system, it will show exact charging start time on the screen. If a unit can not sync local time from the server due to either a connection issue or the unit is used locally without connection, it will only show the remaining time to start the charging session.

h. If unit does not have screen then waiting for off-peak hour will be shown on LED as Blue-Red blinking. (will be shut of after 5 mins)

i. If unit does not have a screen then randomised delay will be shown on LED as Green blinking.

OCPP mode change config items:

i. RandomisedDelayMaxSeconds: [0, 1800] (Default:600, can be set to "0" for disabling)

ii. CurrentSessionRandomDelay: random delay value calculated for active charging session.
The value will be decremented by 1 minute intervals with time passes. (subject to change)

iii. OffPeakCharging: TRUE / FALSE (Default: TRUE)

iv. OffPeakChargingWeekend: TRUE / FALSE (Default: FALSE)

v. OffPeakChargingTimeSlots: 11:00-16:00, 22:00-08:00 (Default: 11:00-16:00, 22:00-08:00)

vi. ContinueAfterOffPeakHour: TRUE / FALSE (Default: FALSE)

vii. ContinueChargingAfterPowerLoss: TRUE / FALSE (Default: TRUE)

viii. ForcedCharging: TRUE / FALSE (Default: False, OCPP CS may set this to TRUE for overriding randomised delay and off-peak and after the charging session charging station will set this to FALSE again.)

Standalone / Local RFID List:

Webconfig General Settings menu “Smart Charging” tab:

Off-peak charging function will be active if and only if device is connected to the central system.

For Standalone modes, off peak charging will be hidden because of the time sync issue.

Randomised Delay Maximum Duration, can take values between 0 and 1800.



Disposal

The crossed-out wheeled bin symbol indicates that this product must not be disposed of as unsorted municipal waste and requires separate disposal. They should be delivered to appropriate collection or recycling facilities for the proper treatment, recovery and recycling of waste electrical and electronic equipment (WEEE). Contact your local authority for information on designated collection and recycling facilities. It is the responsibility of the user to ensure that all personal data stored on the device is deleted before it is disposed of. The device may contain substances that could be hazardous to the environment and human health if not collected and disposed of properly. Material recycling helps reduce waste and conserve resources. Separate collection and disposal of old devices helps prevent potential adverse effects on the environment and human health.

VESTEL

MOBILITY

VESTEL MOBİLİTE SANAYİ VE TİCARET A.Ş. EGE SERBEST BÖLGE ŞUBESİ



Zafer SB Mah. Ayfer Sok. No:22 İç Kapı No:1 Gaziemir, İzmir/ TÜRKİYE

Telefon (pbx) : 90 (232) 251 72 90 Fax : 90 (232) 251 73 13

Gaziemir V.D. : 837 001 0241